



AUTO FUSE FORMING JIG

USER MANUAL



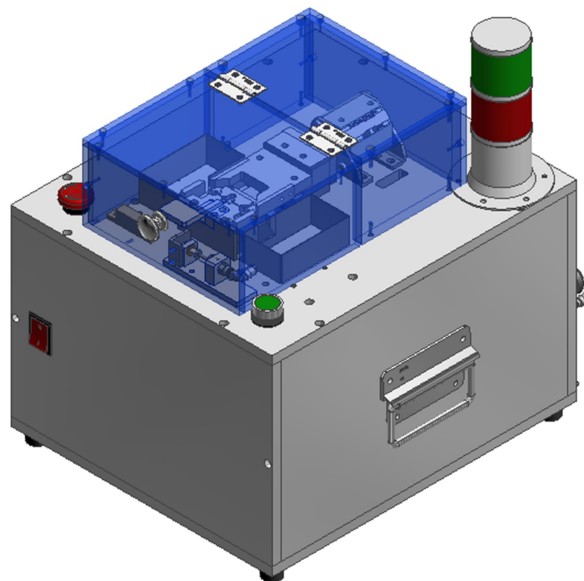


TABLE OF CONTENTS

ITEM	LIST	SHEET
1	JIG APPERANCE	1
2	JIG OPERATION PROCEDURE	2
3	PICTURE REFERENCE	3
4	JIG MECHANICAL TYPE 1 ASSEMBLY & PART LIST	4 - 10
5	JIG MECHANICAL TYPE 2 ASSEMBLY & PART LIST	11- 17
6	ELECTRICAL DIAGRAM TYPE 1	18
7	ELECTRICAL DIAGRAM TYPE 2	19

JIG APPERANCE

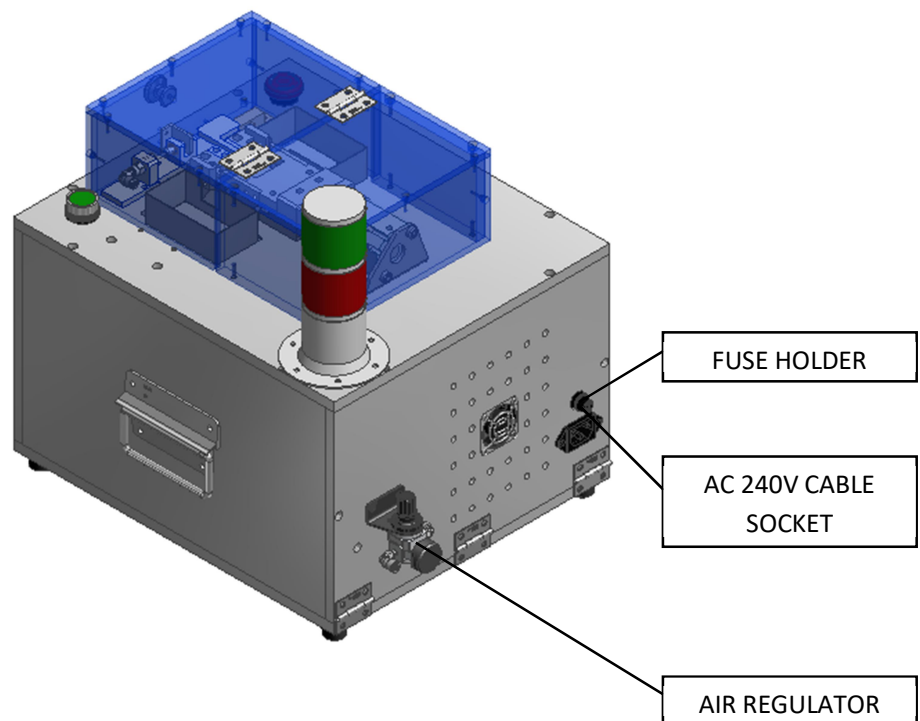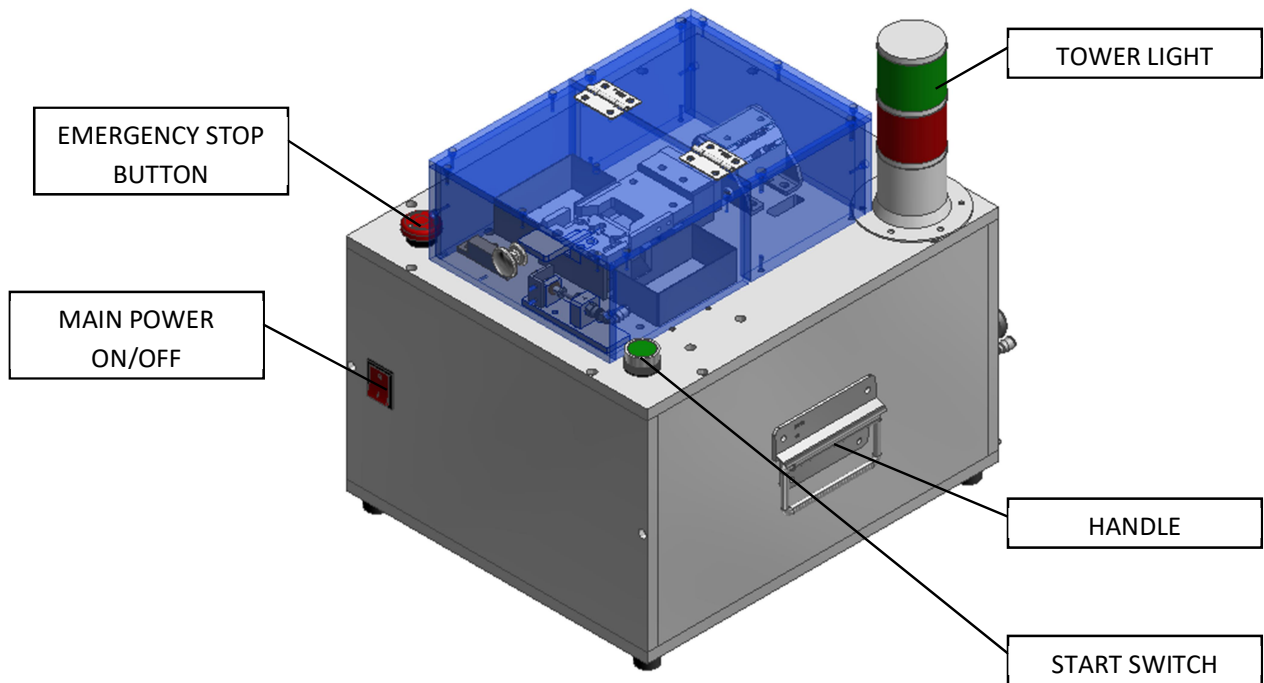


JIG OPERATION PROCEDURE


1. INSERT AIR HOSE TO AIR REGULATOR .
2. INSERT AC CABLE TO AC 240 SOCKET.
3. TURN ON THE POWER SWITCH . PLEASE WAIT A FEW SECONDS FOR JIG TO INITIALISE , GREEN AT TOWER LIGHT WILL TURN ON.
4. OPEN THE SAFETY COVER. (pic 1)
5. PUT FUSE TO THE SLOT AND CLOSE THE SAFETY COVER. (pic 2)
6. PRESS START SWITCH FOR PROCESS TO BEGIN. (pic 3)
7. WHEN PROCESS IS COMPLETED, OPEN THE SAFETY COVER AND PRESS THE LEVER TO TAKE OUT THE FUSE. (pic 4)

*BOTH TYPE 1 AND TYPE 2 HAVE THE SAME OPERATION PROCEDURE


PICTURE REFERENCE

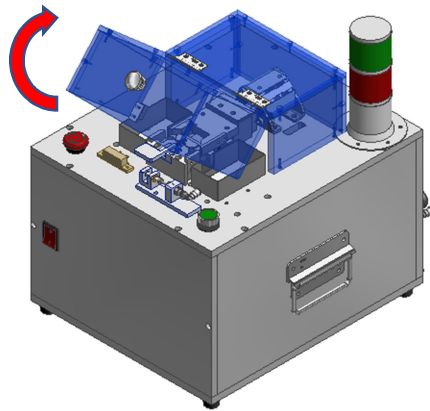


pic 1

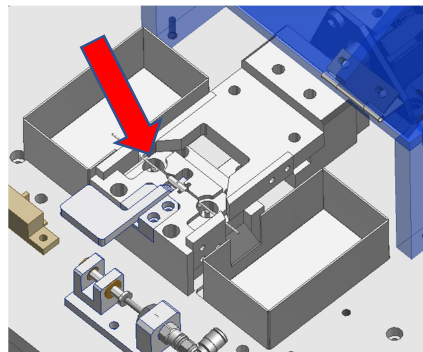

pic 2

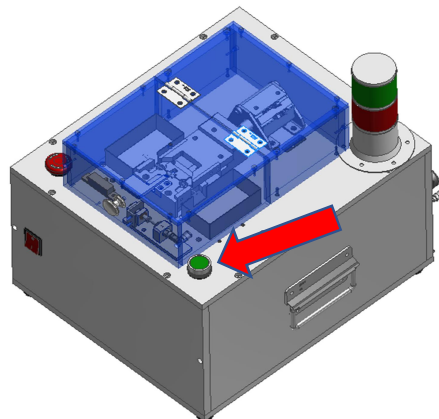



pic 3

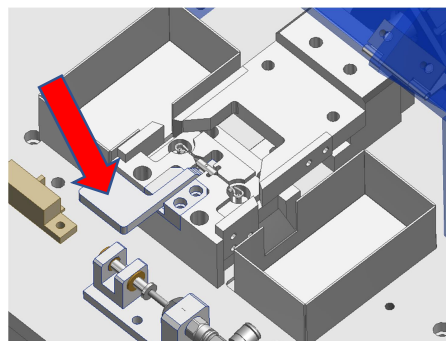



pic 4

JIG MECHANICAL TYPE 1 ASSEMBLY
&
PART LIST

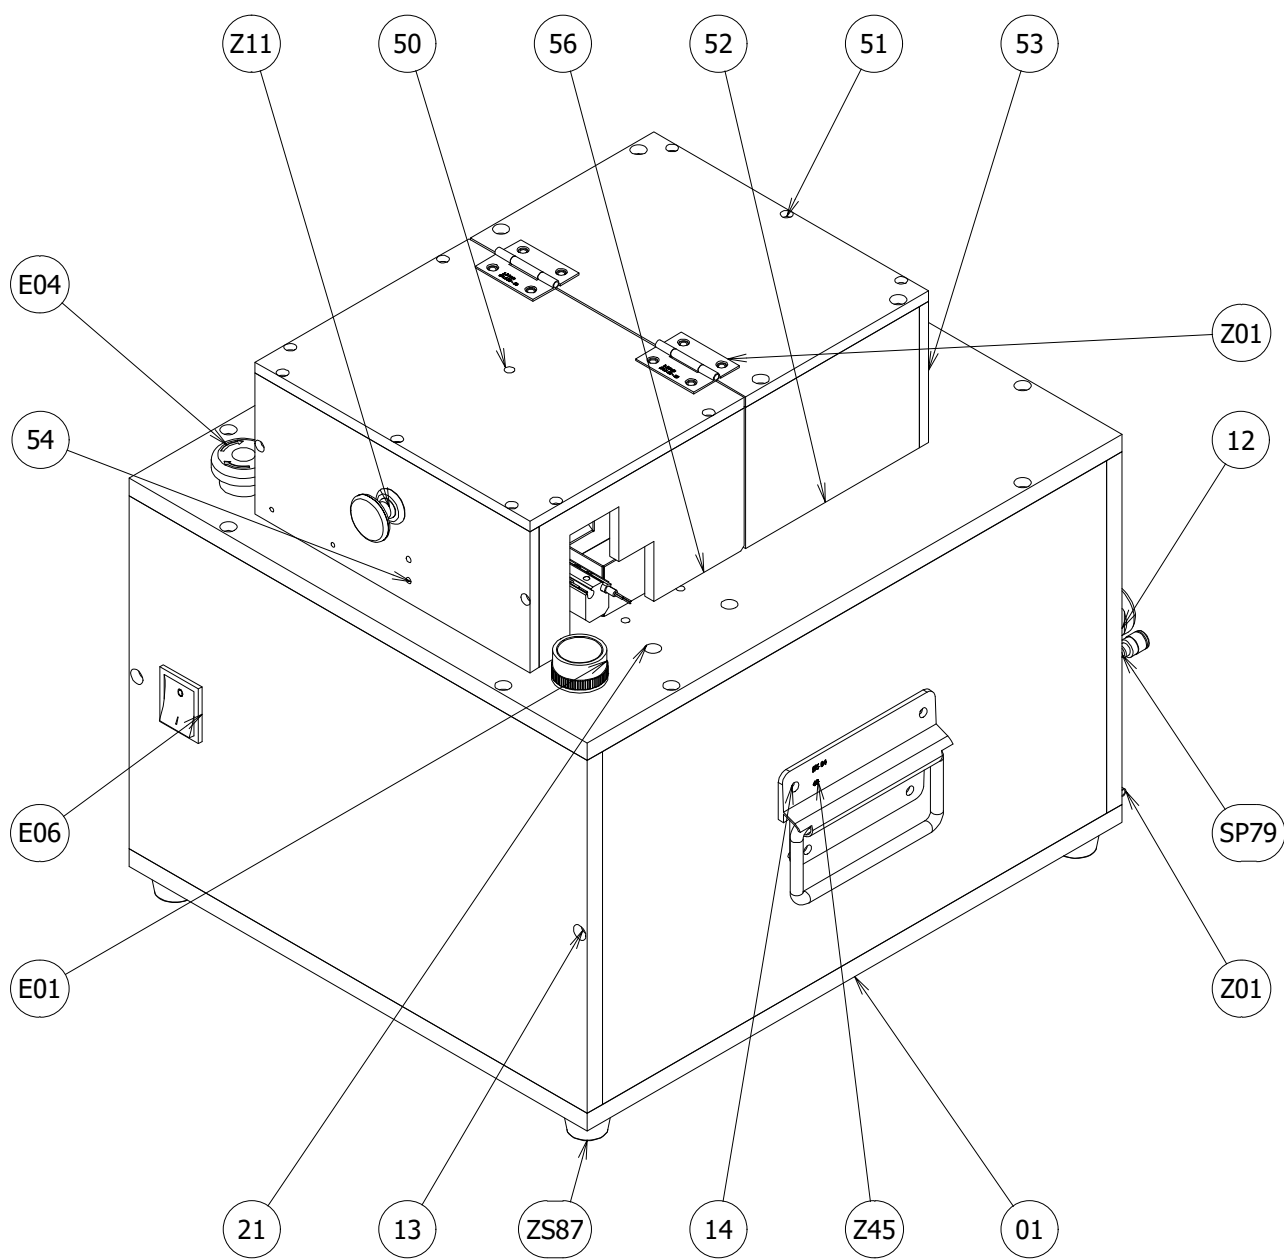

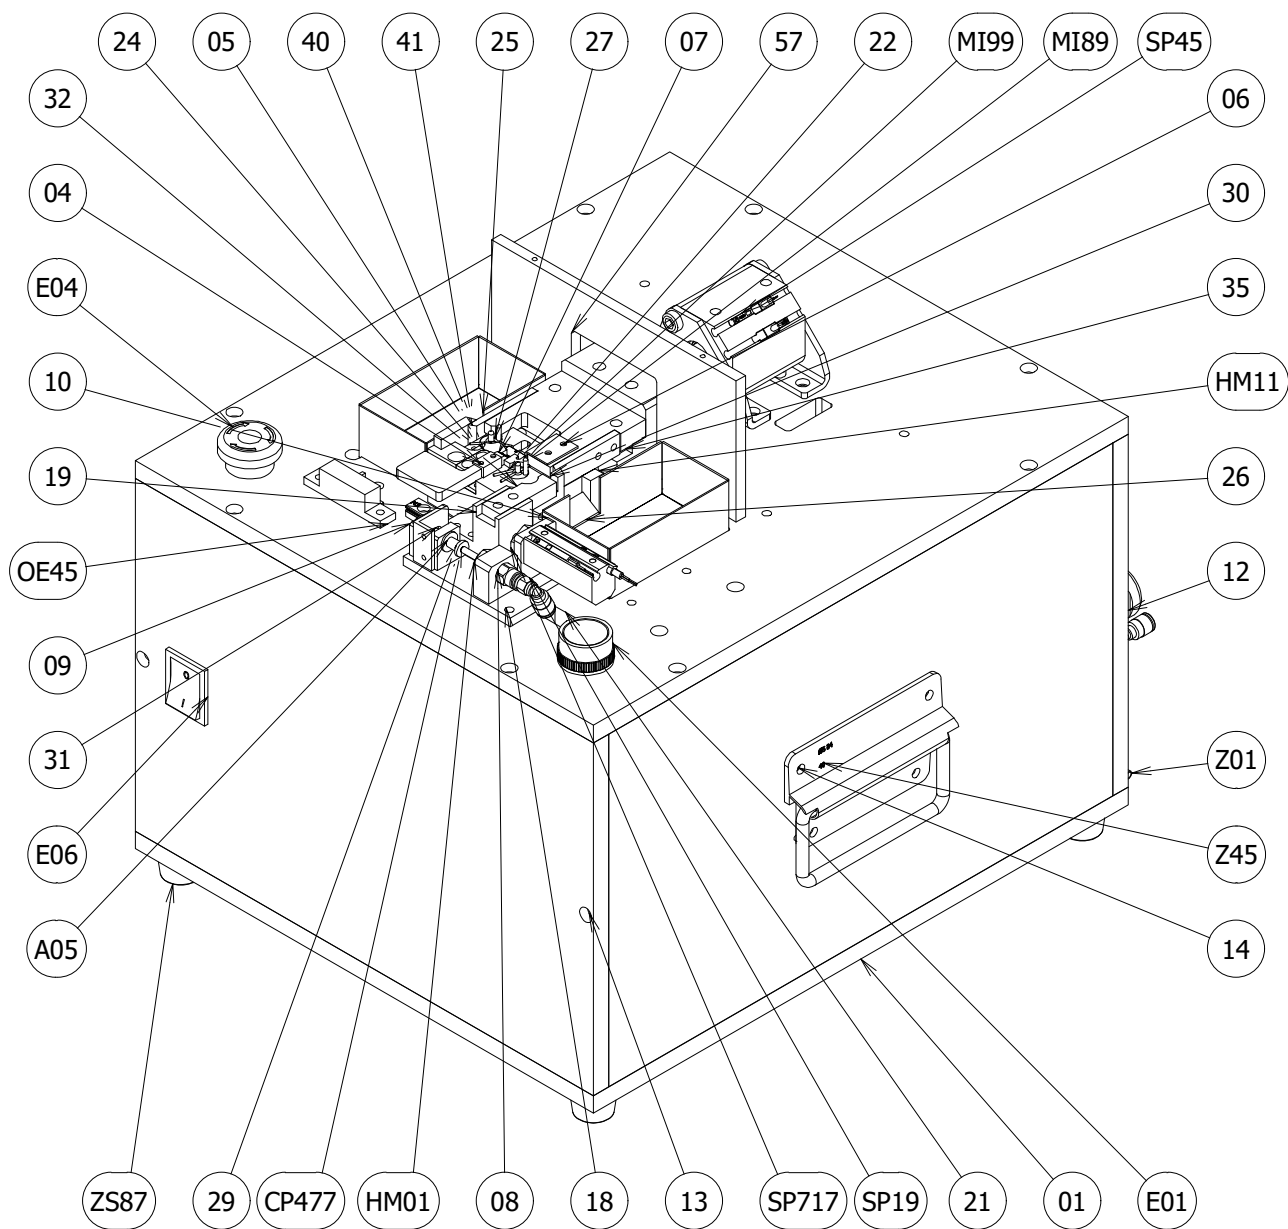

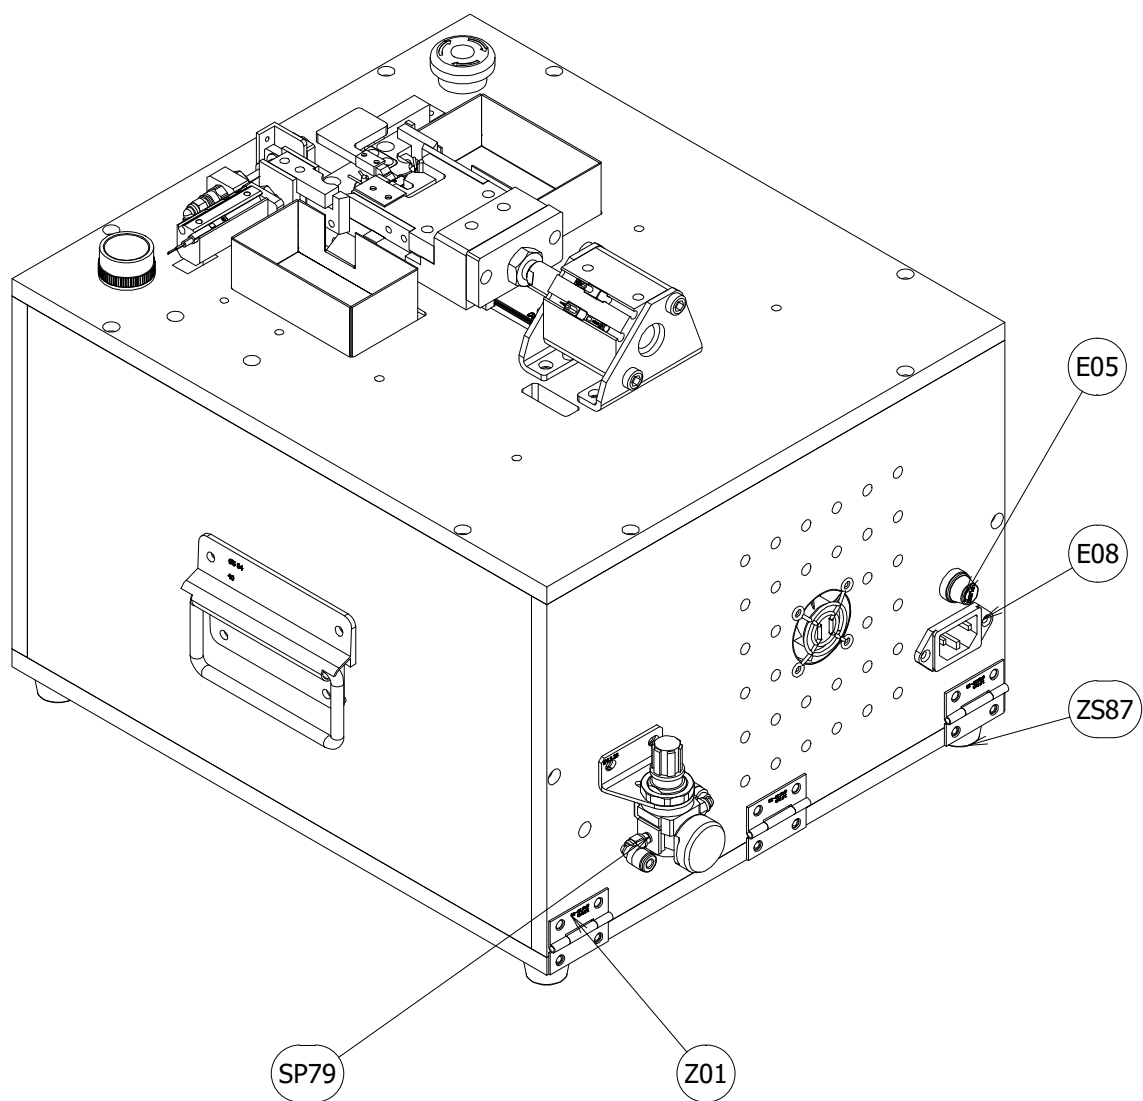


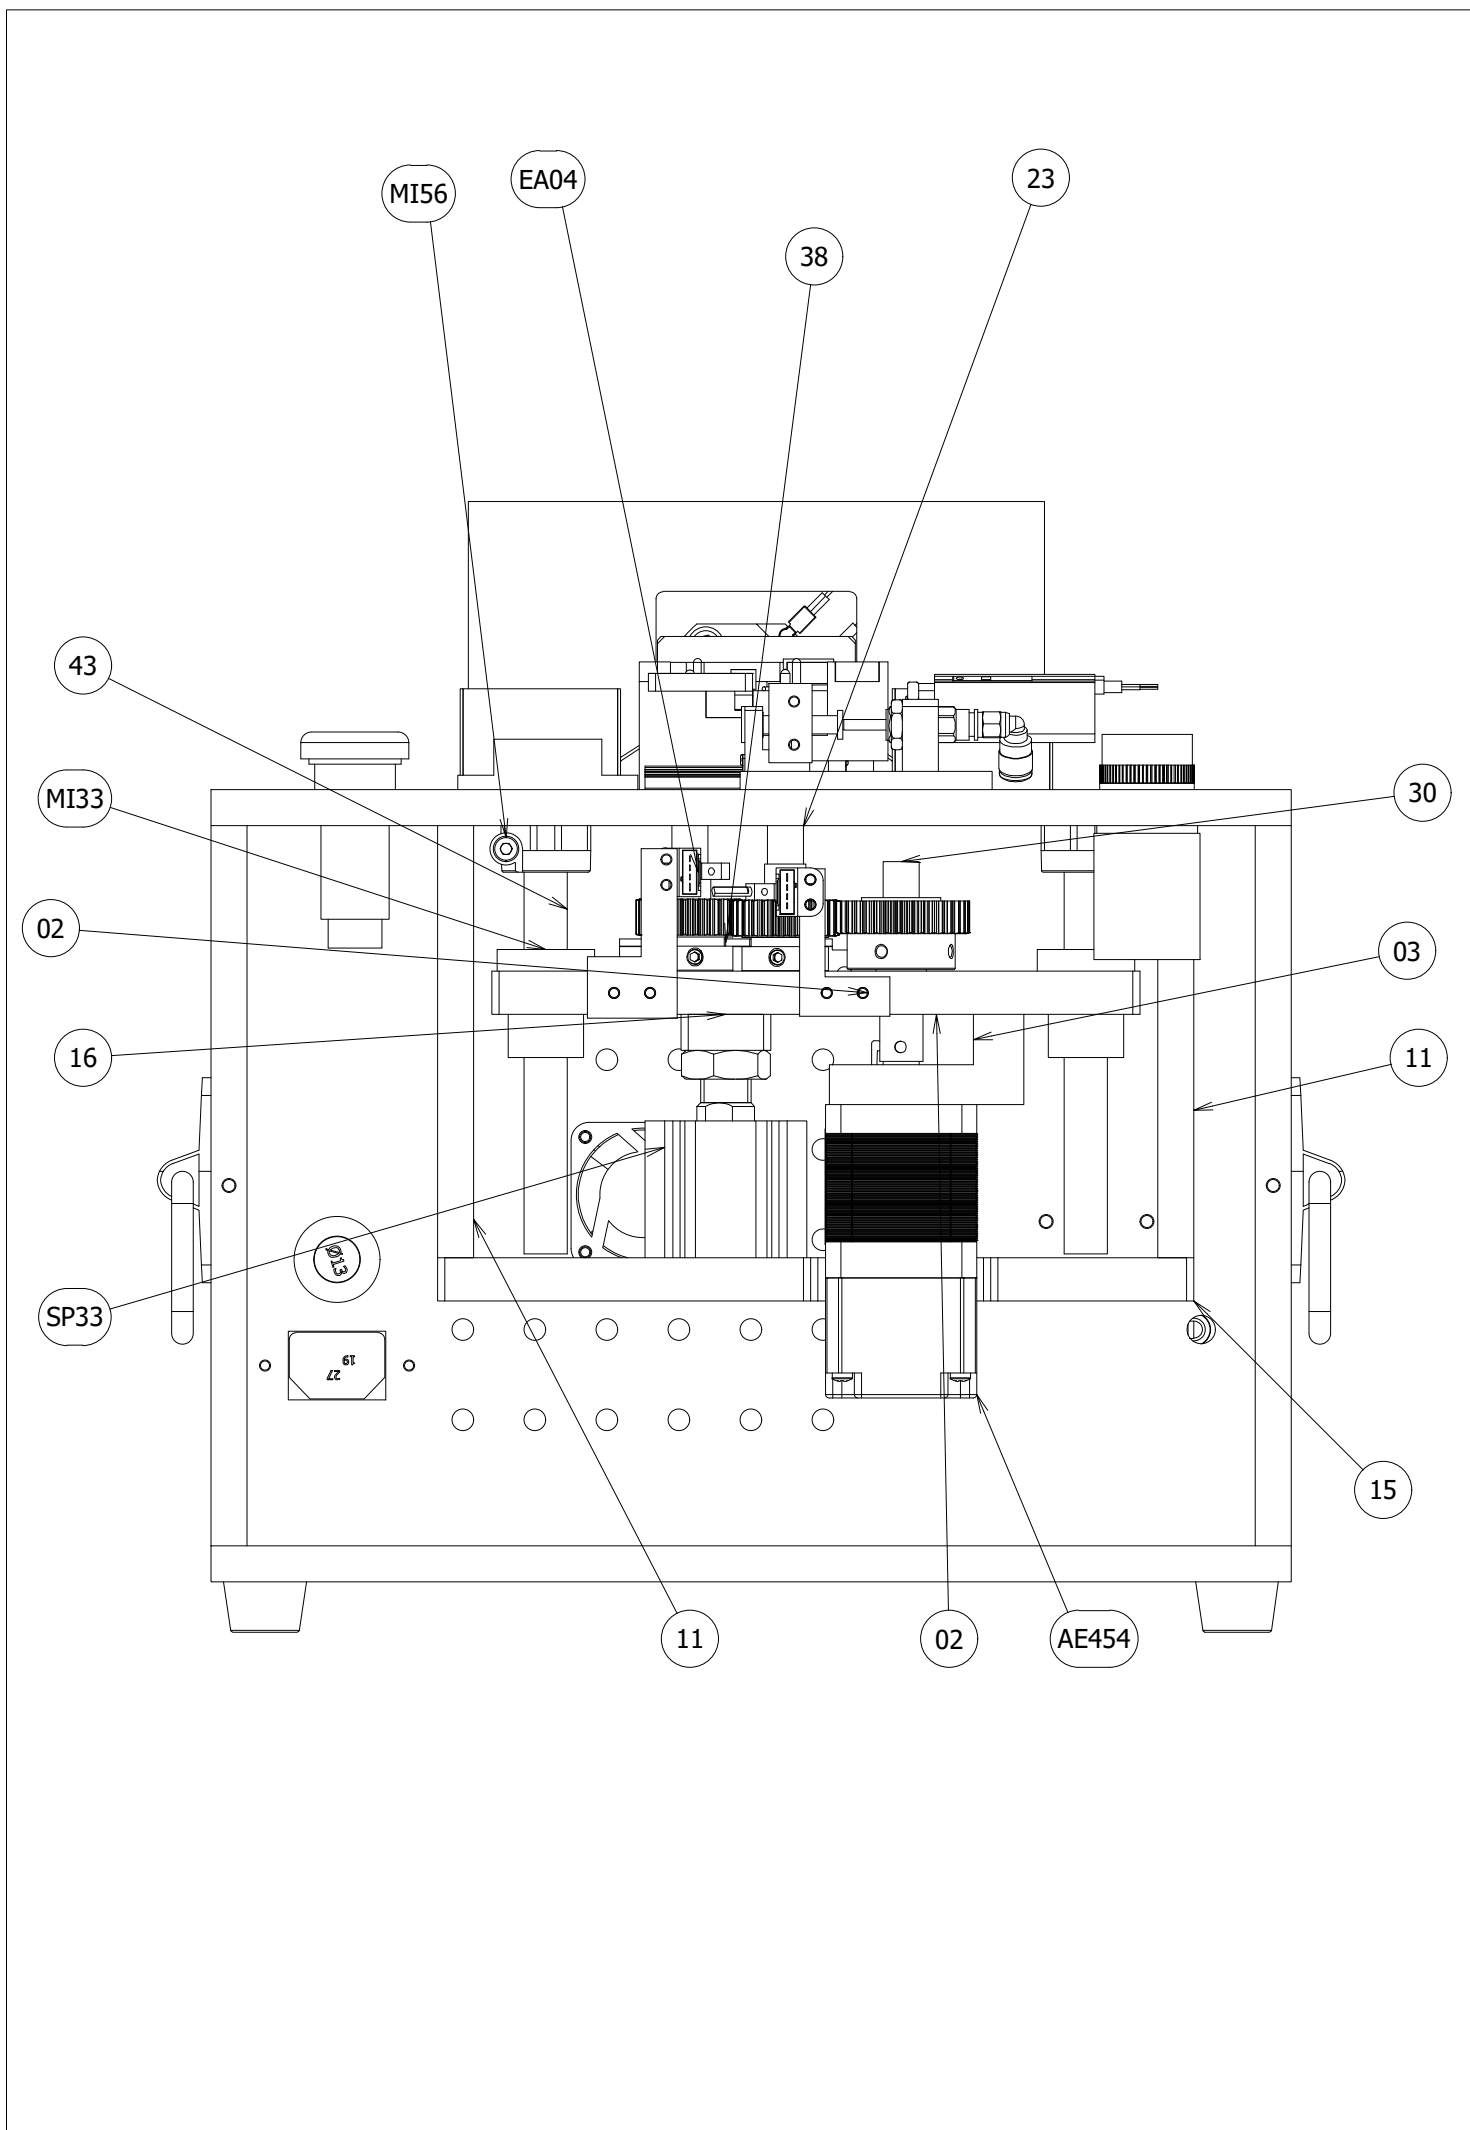



PARTS LIST					
ITEM No	QTY	PART NUMBER	DESCRIPTION	MATERIAL	VENDOR
01	1	B BASE		Aluminum A5052	
02	1	GM PLATE B		Aluminum A5052	
03	1	M PLATE L		Aluminum A5052	
04	1	L PLATE 2		Aluminum A5052	
05	1	LIFTER 2B		Aluminum A5052	
06	1	L PLATE 1		Aluminum A5052	
07	1	LIFTER 1B		Aluminum A5052	
08	1	CYL HOLDER		Aluminum A5052	
09	1	BUSH HOLDER		Aluminum A5052	
10	1	CYL HOLDER 2		Aluminum A5052	
11	2	GM PLATE 3		Aluminum A5052	
12	1	S PLATE 3		Aluminum A5052	
13	1	S PLATE 2		Aluminum A5052	
14	2	S PLATE 1		Aluminum A5052	
15	1	GM PLATE 2B		Aluminum A5052	
16	1	CYL C1		Aluminum A5052	
17	1	SL HOLDER L TYPE		Aluminum A5052	
18	1	CYL PLATE 3B		Aluminum A5052	
19	1	SP HOLDER		Aluminum A5052	
20	1	SL HOLDER R1		Aluminum A5052	
21	1	T BASE B		Aluminum A5052	
22	2	G 2 SHAFT L TYPE		Stainless Steel SUS304	
23	2	G 1 SHAFT L TYPE		Stainless Steel SUS304	
24	1	F HOLDER V4		Stainless Steel SUS304	
25	1	L BOX L		Stainless Steel SUS304	
26	1	L BOX R		Stainless Steel SUS304	
27	1	L PUSHER B1		Stainless Steel SUS304	
29	1	PIN LOCK		Stainless Steel SUS304	
30	1	MTR ADAPTER B		Stainless Steel SUS304	
30	1	CUTTER 2C		Hardened Steel XW41	
31	1	LOCK L2		Stainless Steel SUS304	
32	1	SIDE PUSHER		Stainless Steel SUS304	
33	2	S PIN F		Stainless Steel SUS304	
35	1	LB PLATE A		Mild Steel SS400	
36	1	LB PLATE C		Mild Steel SS400	
38	1	GE PLATE V2		Stainless Steel SUS304	
40	2	CUTTER 1		Hardened Steel XW41	
41	1	CUTTER 2A		Hardened Steel XW41	
43	2	H8		Hardened Steel	
45	2	S RING 1		Brass	
50	1	COVER 1		Antistatic Acrylic	
51	1	COVER 2		Antistatic Acrylic	
52	2	COVER 3		Antistatic Acrylic	
53	1	COVER 5		Antistatic Acrylic	
54	1	COVER 4		Antistatic Acrylic	
55	1	COVER 6		Antistatic Acrylic	
56	1	COVER 6B		Antistatic Acrylic	
57	1	COVER 7		Antistatic Acrylic	


PARTS LIST					
ITEM No	QTY	PART NUMBER	DESCRIPTION	MATERIAL	VENDOR
A05	2	BUSHING D5	BUSHING ID6		LECTROMEC
A06	2	BUSHING D10	BUSHING ID6		LECTROMEC
AE454	1	Ai-M-42LA	DC MOTOR		AUTONICS
BH15	1	6200ZZ	BEARING ID10 OD30 T9		NTN
BN03	1	6201ZZ ID12	BEARING		
BN07	2	6000ZZ ID10 OD26 T8	BEARING ID10 OD26 T8		NTN
CP477	1	CJPB6-10	PNEUMATIC CYLINDER		SMC
E01	1	GREEN SW ROUND 22	ON SWITCH		HANYOUNG
E04	1	EMERGENCY SW S	EMERGENCY SWITCH		HANYOUNG
E05	1	FUSE HOLDER S	FUSE HOLDER		
E06	1	FLIP ON SW	FLIP ON SWITCH		
E08	1	AC SOCKET	AC SOCKET		
EA04	2	BSF V2M	PHOTO ELECTRIC SENSOR		AUTONICS
HM01	1	MGN9C1R 55	LINEAR SLIDE TABLE		HIWIN
HM11	1	MGW9C1 80	LINEAR BEARING		HIWIN
MI33	2	LMH12UUN	LINEAR BEARING FLANGE TYPE		MISUMI
MI56	2	SHF12	SHAFT HOLDER		MISUMI
MI78	1	GEABG1.0-36-10-B-10-KC90-TPC4	GEAR		MISUMI
MI89	2	SPPTH-D2.00-L20.0	PIN	Hardened Steel	MISUMI
MI99	2	SPPTH-D2.60-L15.0	PIN	Hardened Steel	MISUMI
MM543	2	GEABG1.0-28-10-B-10-KC90-TPC5			
OE45	1	OMRON GLS-S1 M2	SENSOR		OMRON
SP19	1	KQ2L04-M5	L FITTING D4 M5		SMC
SP33	1	CDQ2A32-5DMZ-M9BV	COMPACT PNEUMATIC CYLINDER		SMC
SP45	1	CDQ2L25-15DMZ-M9BV	COMPACT PNEUMATIC CYLINDER		SMC
SP717	1	CDJP2B10-20D-M9B	PIN PNEUMATIC CYLINDER		SMC
SP79	1	AR10-M5BG	AIR REGULATOR		SMC
Z01	5	HINGE MERVIN	HINGE		
Z11	1	KNOB	KNOB		
Z45	2	HANDLE 84 40			
ZS04	1	FAN 40mm			
ZS87	4	RUBBER STAND M3	RUBBER STAND M3		

JIG MECHANICAL TYPE 2 ASSEMBLY
&
PART LIST

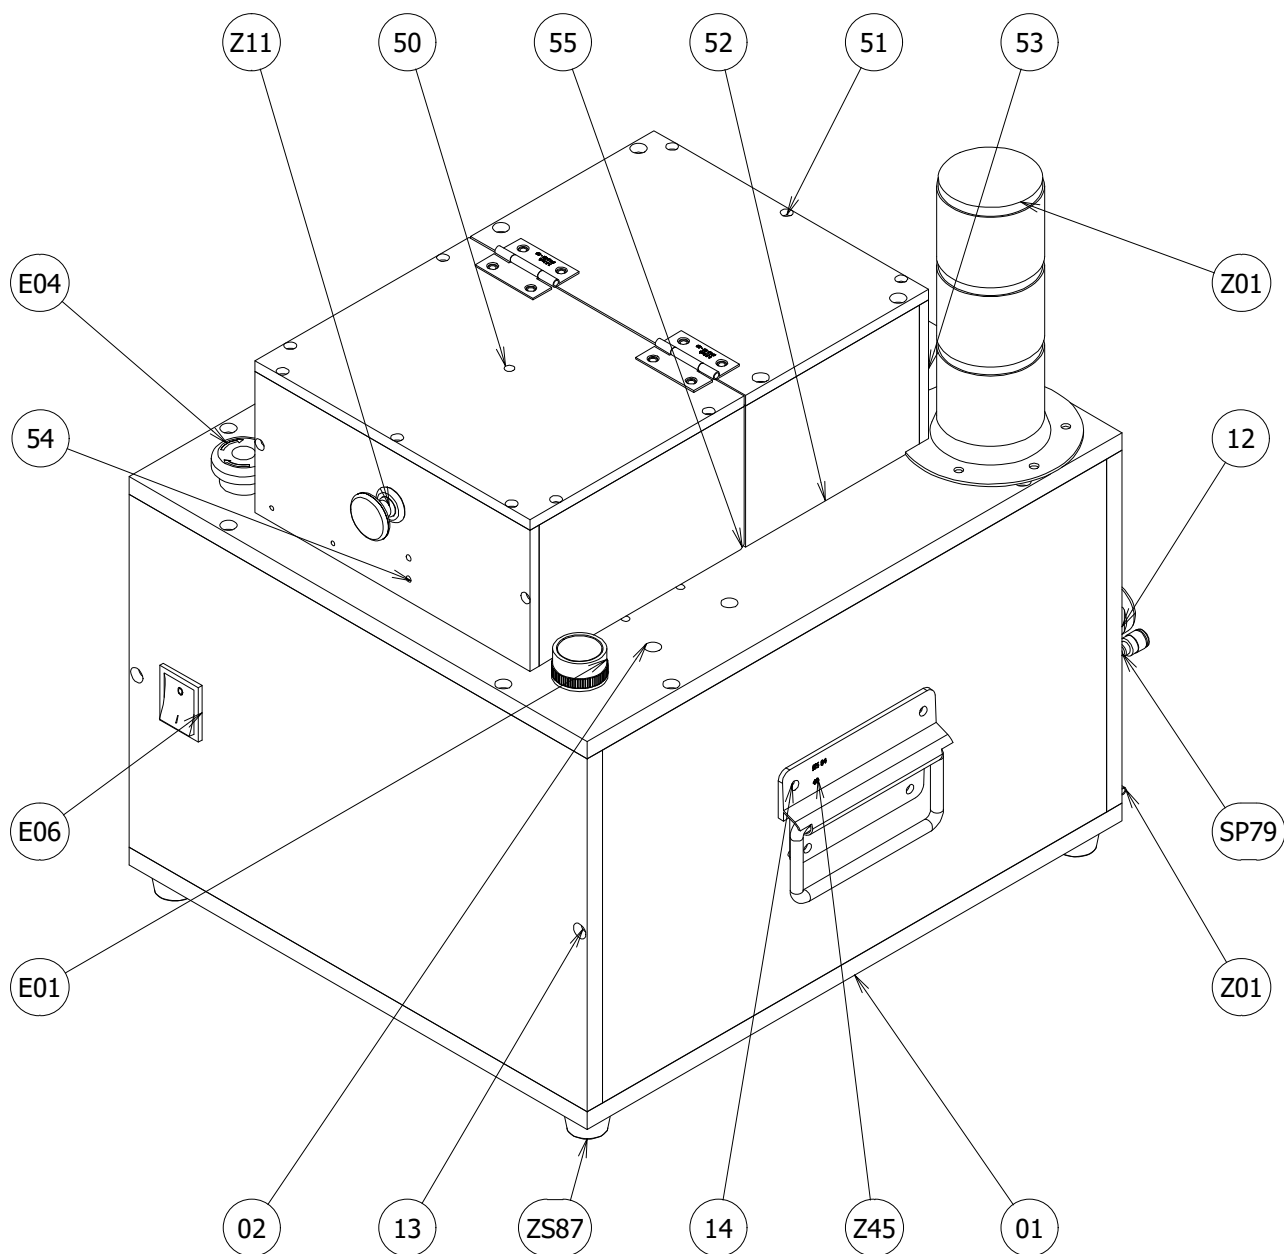

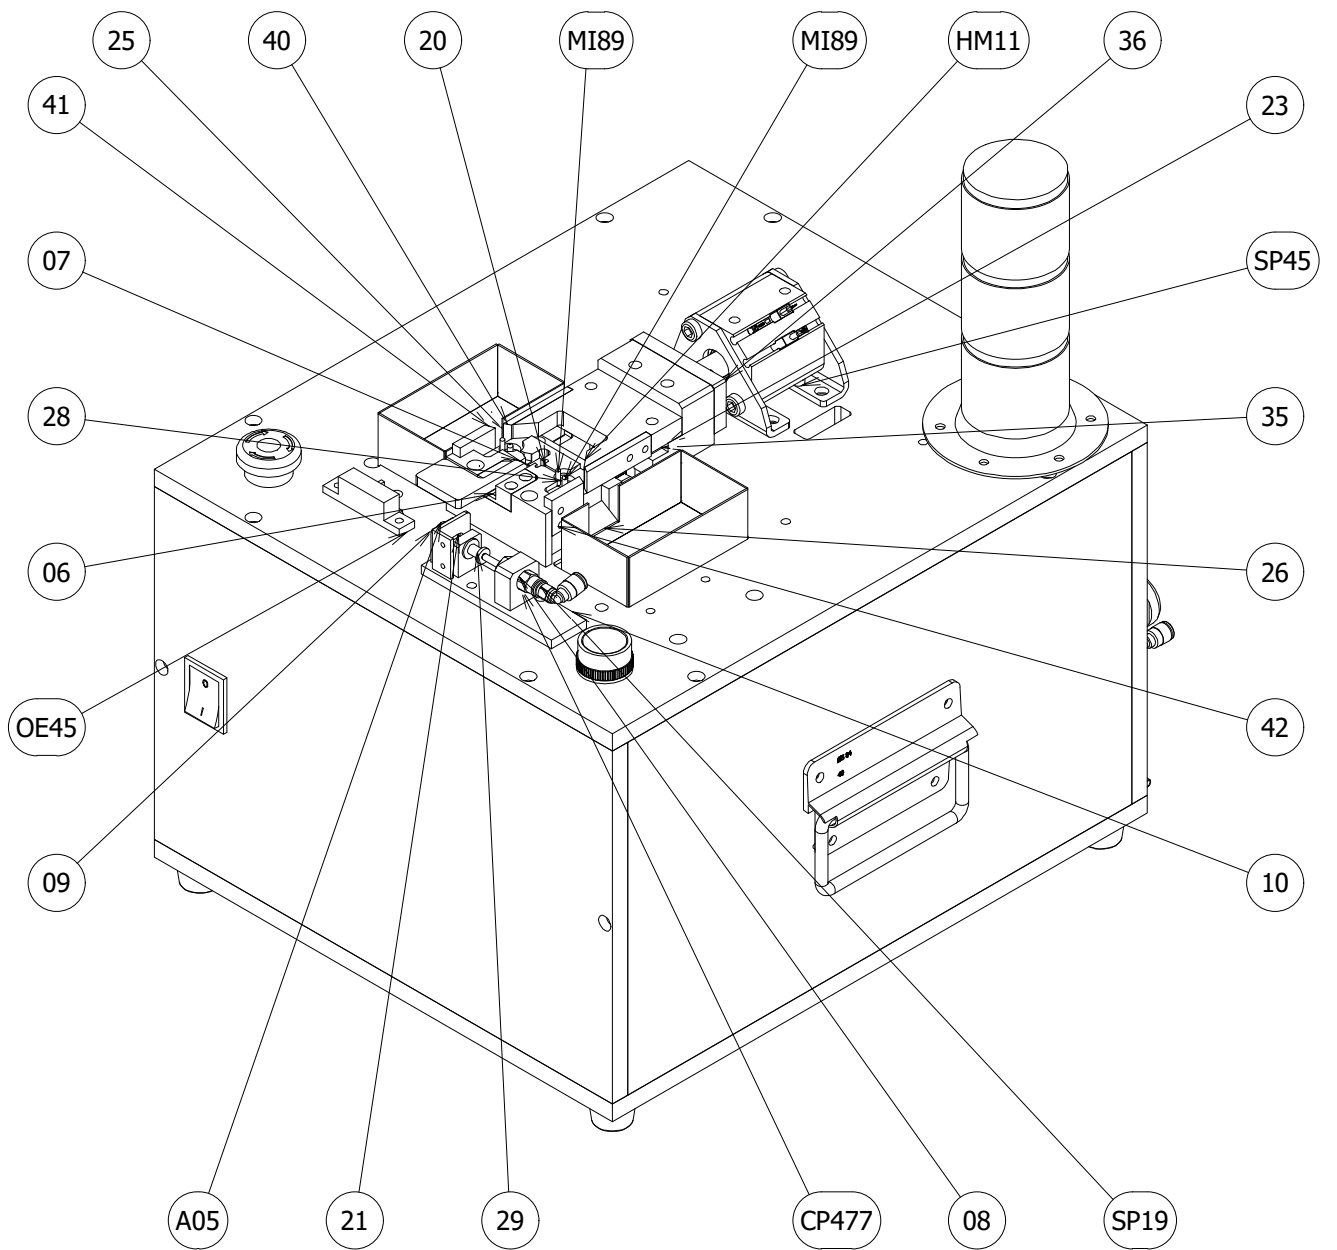

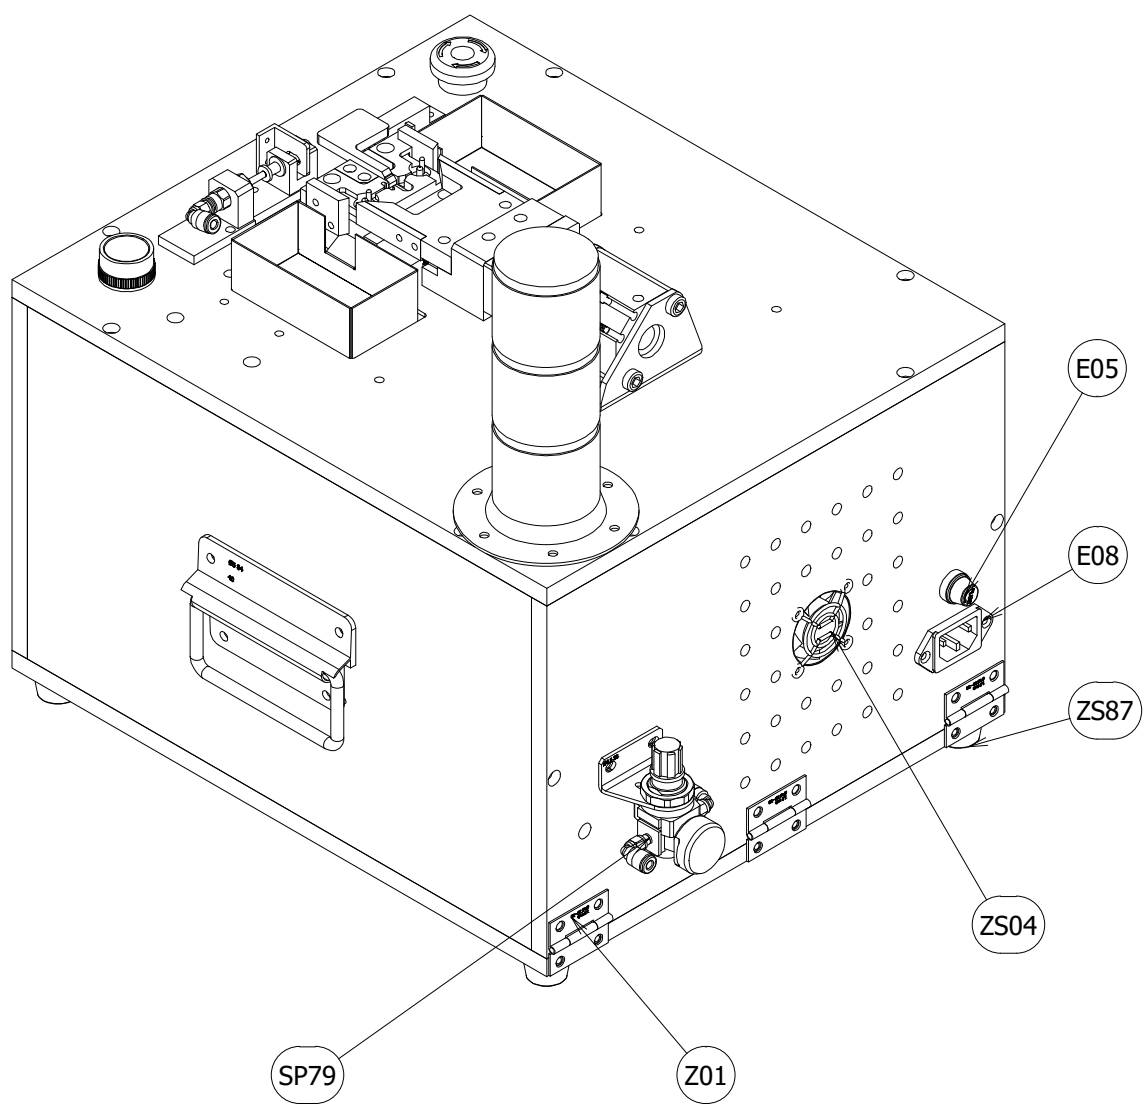

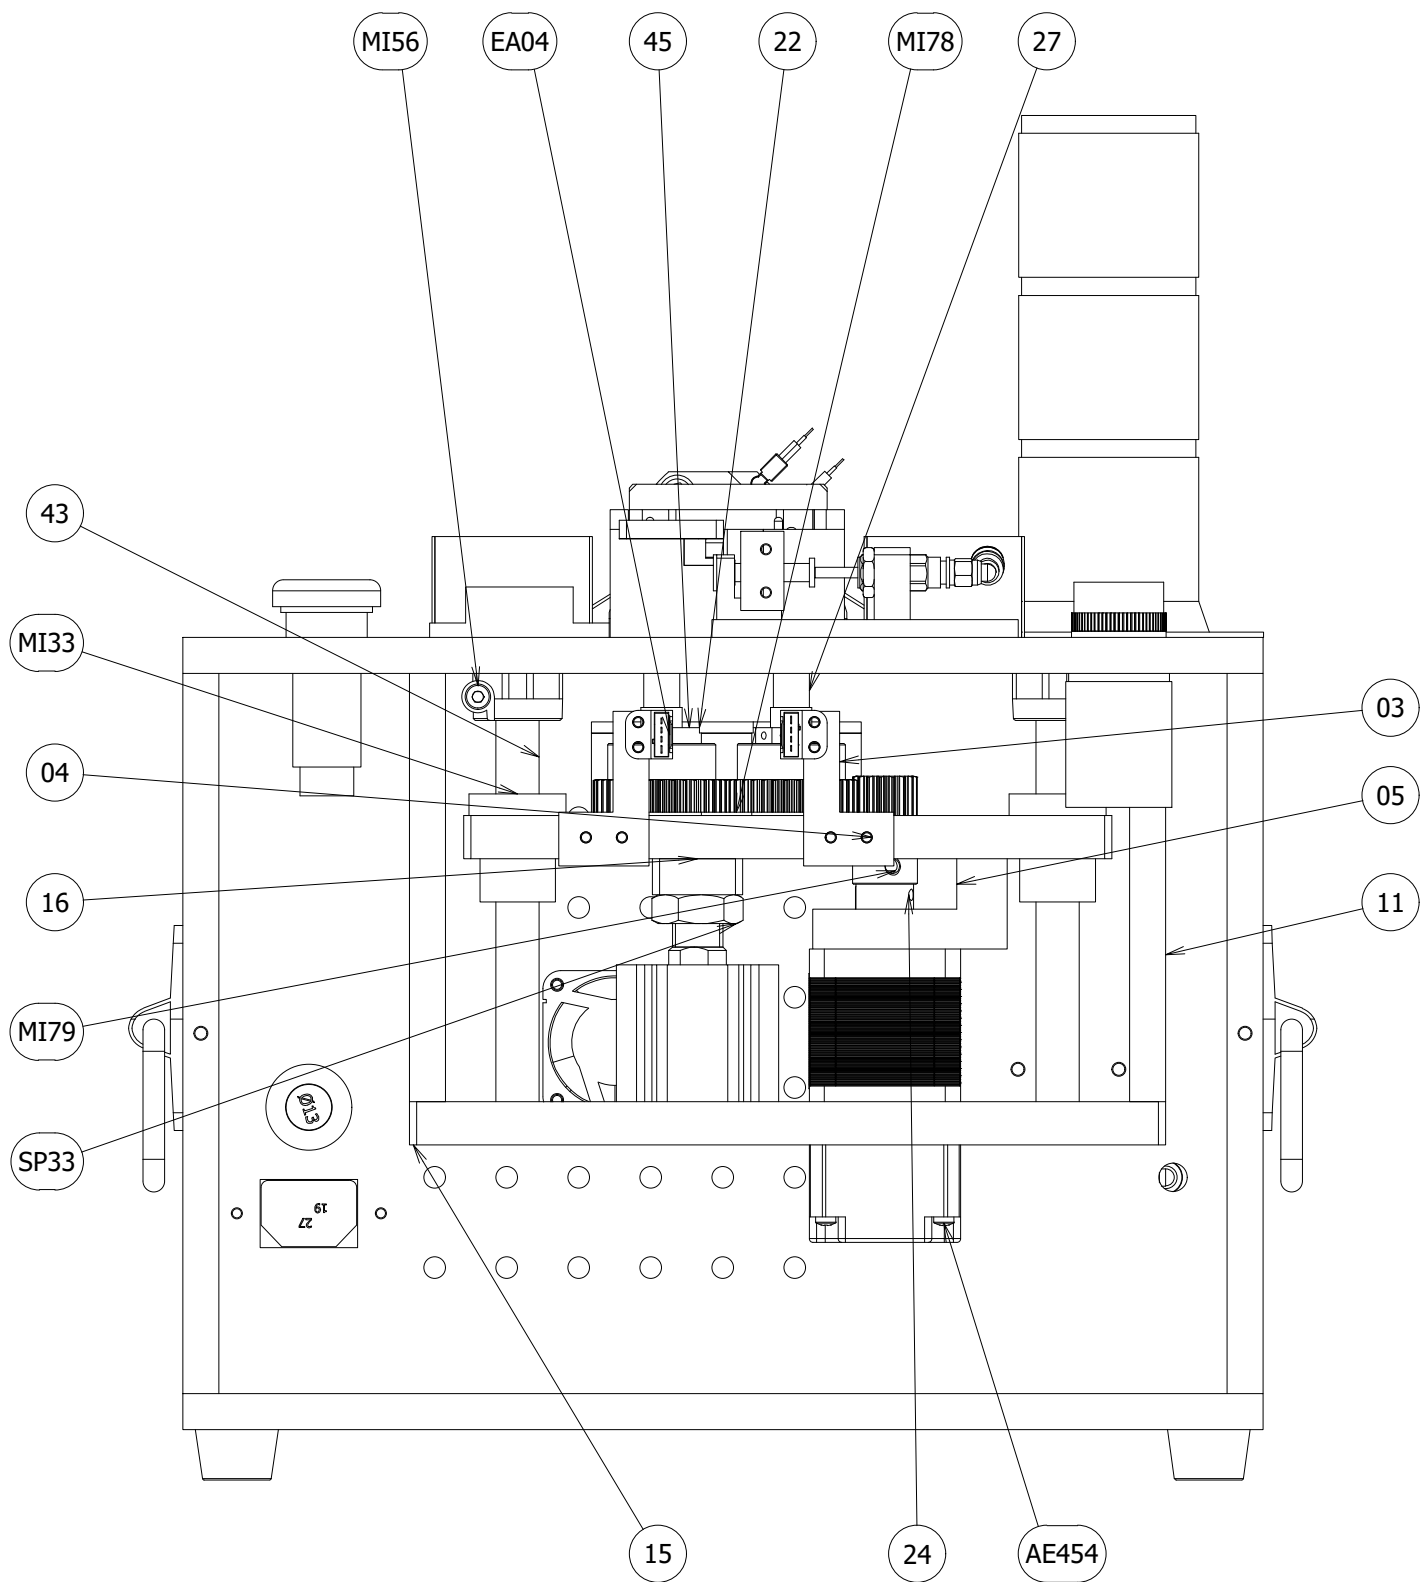

PARTS LIST


ITEM No	QTY	PART NUMBER	DESCRIPTION	MATERIAL	VENDOR
01	1	B BASE		Aluminum A5052	
02	1	T BASE		Aluminum A5052	
03	2	SL HOLDER		Aluminum A5052	
04	1	GM PLATE		Aluminum A5052	
05	1	M PLATE		Aluminum A5052	
06	1	LIFTER 2		Aluminum A5052	
07	1	LIFTER 1B		Aluminum A5052	
08	1	CYL HOLDER		Aluminum A5052	
09	1	BUSH HOLDER		Aluminum A5052	
10	1	CYL PLATE 3		Aluminum A5052	
11	2	GM PLATE 3		Aluminum A5052	
12	1	S PLATE 3		Aluminum A5052	
13	1	S PLATE 2		Aluminum A5052	
14	2	S PLATE 1		Aluminum A5052	
15	1	GM PLATE 2		Aluminum A5052	
16	1	CYL C1		Aluminum A5052	
20	1	F HOLDER 11.02.2022		Stainless Steel SUS304	
21	1	LOCK L		Stainless Steel SUS304	
22	1	GE PLATE		Stainless Steel SUS304	
23	1	L PUSHER		Stainless Steel SUS304	
24	1	MTR ADAPTER		Stainless Steel SUS304	
25	1	L BOX L		Stainless Steel SUS304	
26	1	L BOX R		Stainless Steel SUS304	
27	2	G 1 SHAFT		Stainless Steel SUS304	
28	2	G 2 SHAFT		Stainless Steel SUS304	
29	1	PIN LOCK		Stainless Steel SUS304	
35	1	LB PLATE A		Mild Steel SS400	
36	1	LB PLATE C		Mild Steel SS400	
40	2	CUTTER 1		Hardened Steel XW41	
41	1	CUTTER 2A		Hardened Steel XW41	
42	1	CUTTER 2B		Hardened Steel XW41	
43	2	H8		Hardened Steel	
45	2	S RING 1		Brass	
50	1	COVER 1		Antistatic Acrylic	
51	1	COVER 2		Antistatic Acrylic	
52	2	COVER 3		Antistatic Acrylic	
53	1	COVER 5		Antistatic Acrylic	
54	1	COVER 4		Antistatic Acrylic	
55	2	COVER 6		Antistatic Acrylic	

PARTS LIST					
ITEM No	QTY	PART NUMBER	DESCRIPTION	MATERIAL	VENDOR
A05	2	BUSHING D5	BUSHING ID6		LECTROMECH
AE454	1	Ai-M-42LA	DC MOTOR		AUTONICS
BH15	3	6200ZZ	BEARING ID10 OD30 T9		NTN
CP477	1	CJPB6-10	PNEUMATIC CYLINDER		SMC
E01	1	GREEN SW ROUND 22	ON SWITCH		HANYOUNG
E04	1	EMERGENCY SW S	EMERGENCY SWITCH		HANYOUNG
E05	1	FUSE HOLDER S	FUSE HOLDER		
E06	1	FLIP ON SW	FLIP ON SWITCH		
E08	1	AC SOCKET	AC SOCKET		
EA04	2	BSF V2M	PHOTO ELECTRIC SENSOR		AUTONICS
HM11	1	MGW9C1 80	LINEAR BEARING		HIWIN
MI33	2	LMH12UUN	LINEAR BEARING FLANGE TYPE		MISUMI
MI56	2	SHF12	SHAFT HOLDER		MISUMI
MI78	2	GEABG1.0-36-10-B-10-KC90-TP C4	GEAR		MISUMI
MI79	1	GEABG1.0-16-12-K-8	GEAR		MISUMI
MI89	2	PIN 2.7	PIN	Hardened Steel	MISUMI
MI89	2	PIN 2.0	PIN	Hardened Steel	MISUMI
OE45	1	OMRON GLS-S1 M2	SENSOR		OMRON
SP19	1	KQ2L04-M5	L FITTING D4 M5		SMC
SP33	1	CDQ2A32-5DMZ-M9BV	COMPACT PNEUMATIC CYLINDER		SMC
SP45	1	CDQ2L25-15DMZ-M9BV	COMPACT PNEUMATIC CYLINDER		SMC
SP79	1	AR10-M5BG	AIR REGULATOR		SMC
Z01	1	TOWER LIGHT 2 COLOR			
Z01	5	HINGE MERVIN	HINGE		
Z11	1	KNOB	KNOB		
Z45	2	HANDLE 84 40			
ZS04	1	FAN 40 WG			
ZS87	4	RUBBER STAND M3	RUBBER STAND M3		

ELECTRICAL DIAGRAM TYPE 1

Dyson Auto Fuse Forming Wiring - Version 1.1



















Jig Wiring

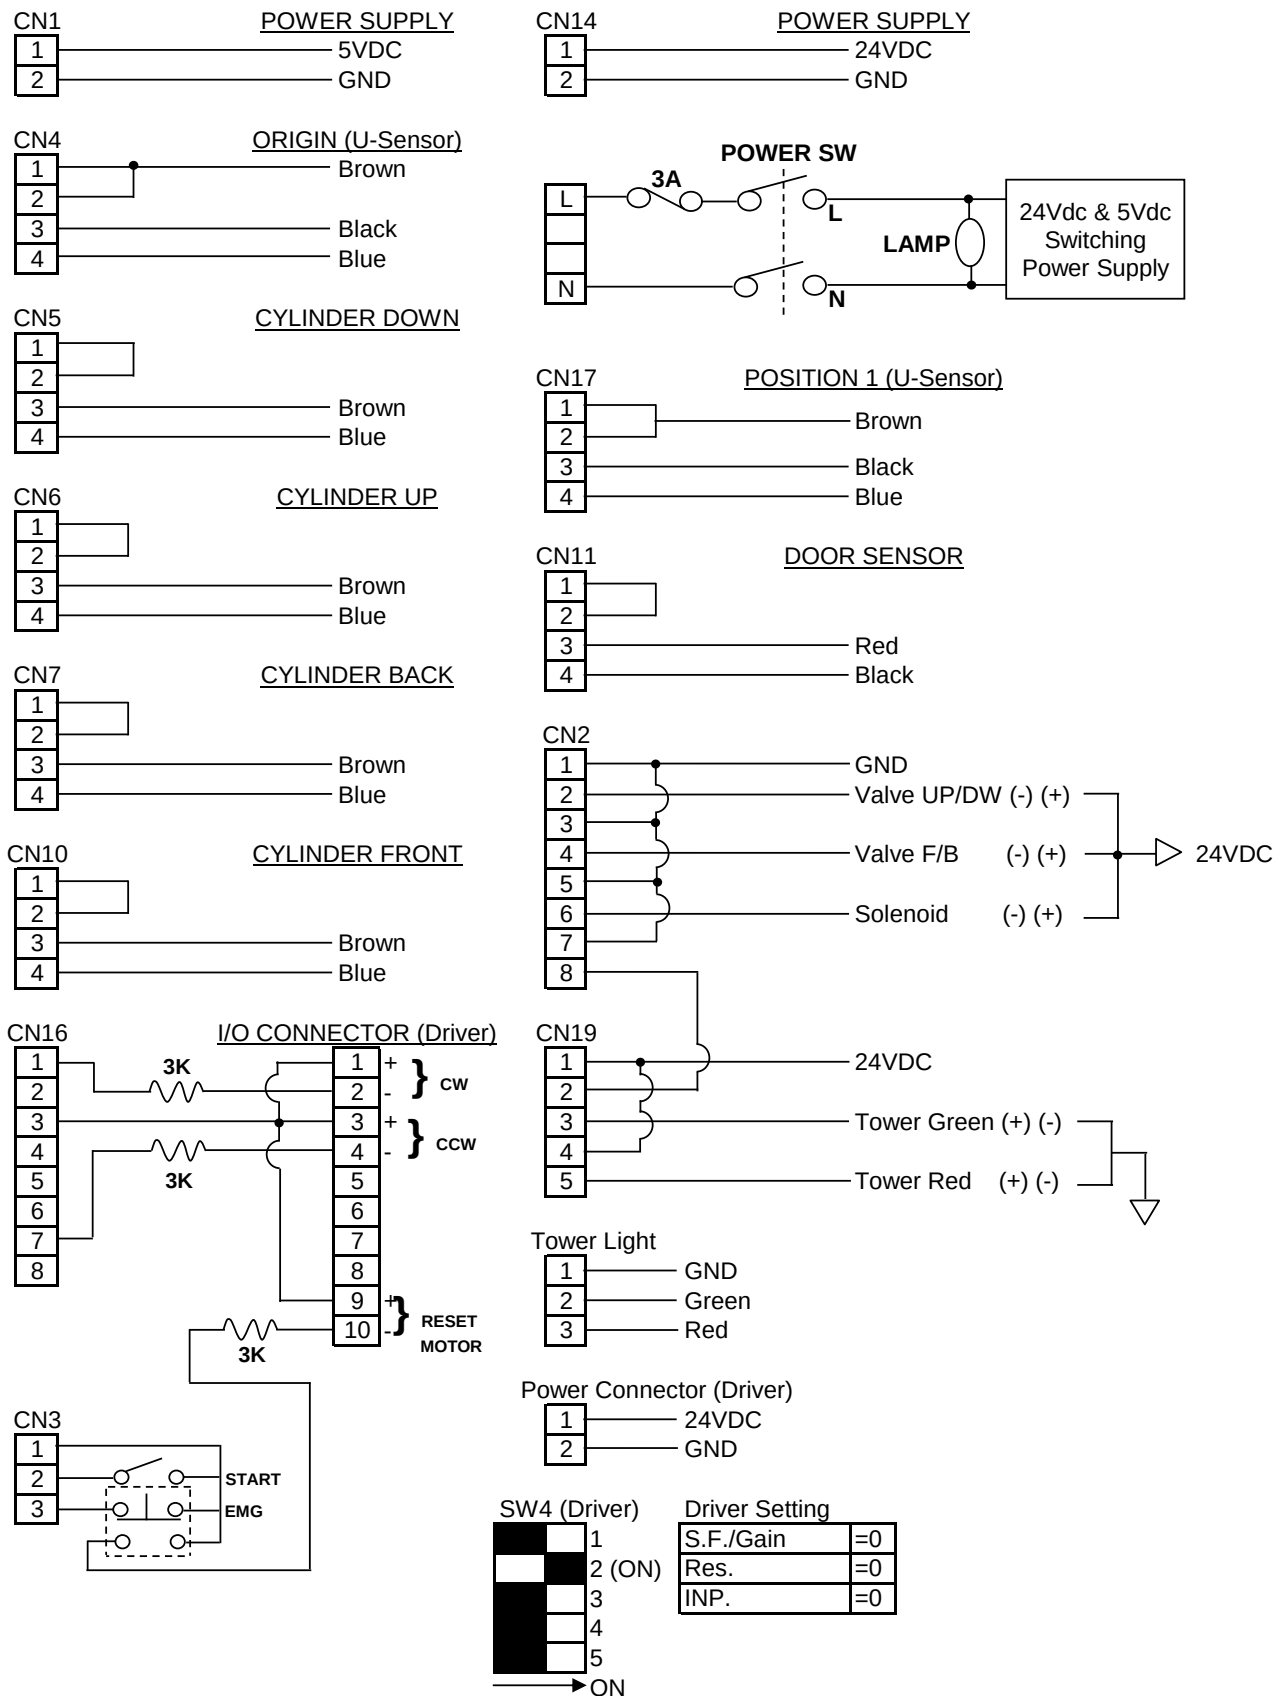

ELECTRICAL DIAGRAM TYPE 2

Dyson Auto Fuse Forming Wiring - Version 2.1

Jig Wiring

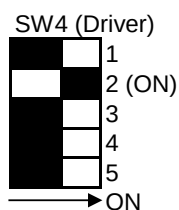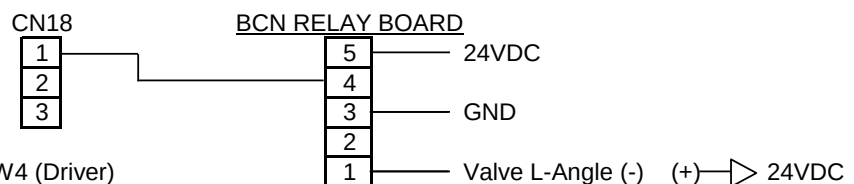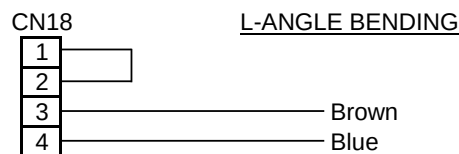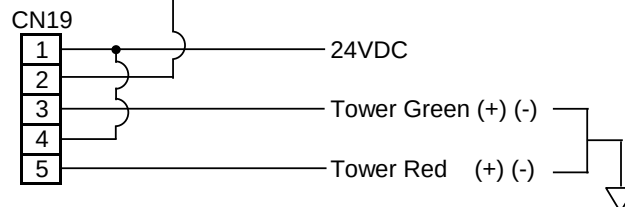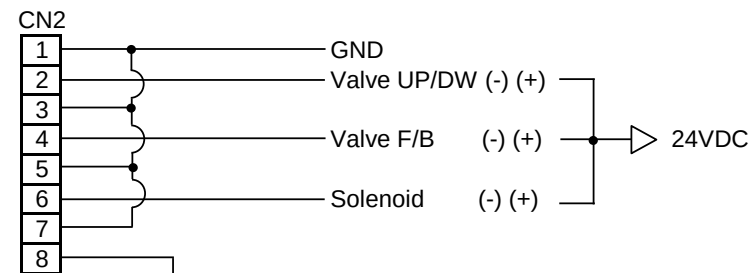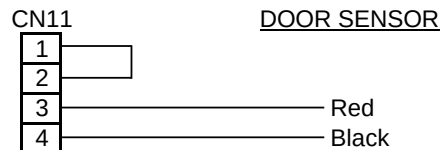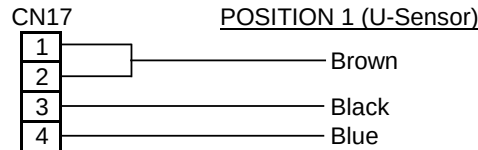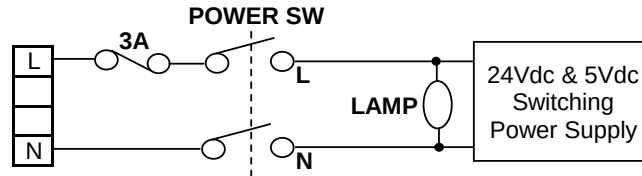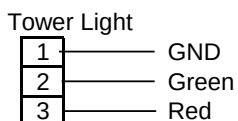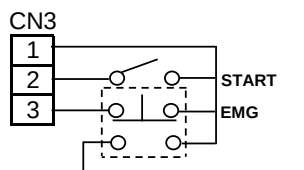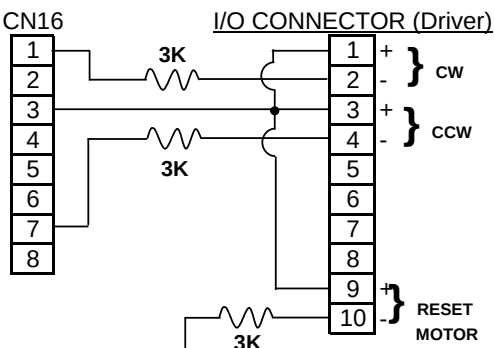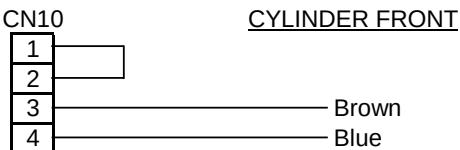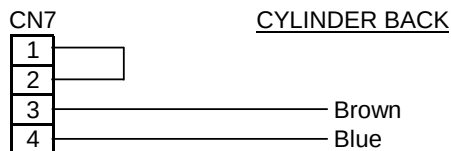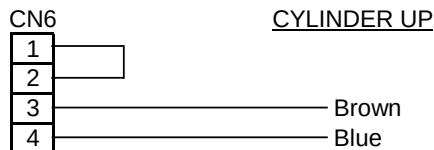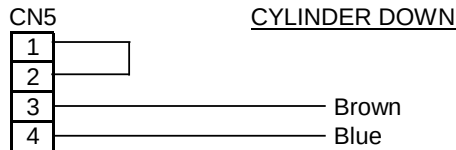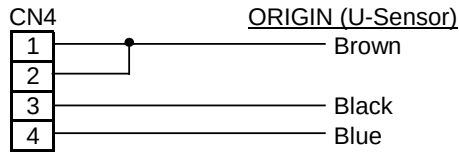

Driver Setting	
S.F./Gain	=0
Res.	=0
INP.	=0

